

# bRite Advanced

## Robust, Fast, Flexible – Mobile Performer



### Fast Operation

- bRite's innovative keyboard technology delivers advanced weighing and signal processing for extremely fast operation.
- The keysheet layers can be exchanged for optimum hygiene and cost efficiency.



### Direct Control

- Four display lines – including an extra line highlighting preset fares – are clear and easy to read in all conditions.
- The backlight can be switched on or off and to save power, the scale automatically goes into the sleep mode when not in use.



### Connectivity

- Printing tickets and reports in five languages are standard features of bRite Advanced.



### Clever Mobile Business

For complete mobility, the scale can be powered by both rechargeable NiMH batteries or standard size D commercial batteries at the flip of a switch.



With built-in cable storage, the work area is kept tidy, transportation is simple and the risk of mislaying the power cable is eliminated.



### bRite Advanced

bRite Advanced line has been designed to offer optimum quality for the price in order to guarantee the robustness, operating speed and accuracy you need, whatever your retail environment. The Light-Touch layer keyboard, a large 4-line LCD, Ergo Grips and the integrated cable storage offer you a complete package of features rarely seen on an entry level price-computing scale – ensuring that it stands out from the crowd.

This high precision weighing instrument complies with highest industry standards, including 10V/m OIML regulations. Features like the power adapter with Power Efficiency Level V and RoHS compliant components also demonstrate our commitment to electronic safety, accuracy and environmental care.

# bRite Advanced

## Price Computing Scale

### Reliable performance

METTLER TOLEDO's long-term experience in engineering precise weighing instruments ensures fast customer transactions and long-lasting performance. bRite stands for user friendly functionality and operation. The high quality of the load cell ensures long-term reliability, while the high speed stabilization means fast signal processing and therefore fast price calculation.

### Robust and mobile

The bRite Advanced line is constructed from stamped parts with a sturdy frame plus a large, robust stainless steel weighing plate for easy weighing of larger items. The stainless steel is of high quality making it water resistant and easy to keep hygienic, vital for food safety. For even higher protection, covers are available for both the scale and PLU. The option of rechargeable NiMH or standard size D commercial batteries delivers full mobility for fast business anytime, anywhere.

### Modern design – Handy and stable

- Available either as check weighing, compact or tower version, this scale is an artwork that brings in line a slim silhouette design with a trapezoidal platform shape, an ergonomic keyboard structure and optimal placed display angles to grant best readability.
- Two ergonomic grips on the lower side of the scale combined with its light net weight make it extremely easy to transport, while bRite's adjustable non-slip rubber feet make levelling simple and ensure that the scale does not move around whilst in use.



bRite Weigh Only


bRite Advanced Tower

### Specifications

Model Options*	<b>bRite Advanced Compact versions:</b> 12 kg/2 g, 3/6 kg/1/2 g, 15 kg/5 g, 6/15 kg/2/5 g, 30 kg/5 g <b>bRite Advanced Tower version:</b> 6/15 kg/2/5 g <b>bRite Weigh Only version:</b> 6/15 kg/2/5
Display	LCD with backlight; 6-digit weight, 6-digit unit price, 7-digit total price, 4-digit preset tare
Key	32 light touch keys
Preset key	16 keys, every key can store 2 PLU
Stainless steel pan	240 x 337 mm (trapezoid)
PLU quantity	100
Power	Power adapter: 100~240VAC, 50/60Hz Battery: 6 NiMH or D-Cell batteries
Gross weight/Net weight	Tower version: Gross weight: 5.54 kg/ Net weight: 3.73 kg Compact/Weigh Only version: Gross weight: 5.23 kg/ Net weight: 3.42 kg
Shipping box (L x W x H)	480 x 465 x 180 mm
Working environment	Temperature: -10°C ~ +40°C; Humidity: 85%RH, non-condensation
Storage environment	Temperature: -25°C~+50°C; Humidity: 85%RH, non-condensation
Weighing function	Zero, Tare, 100g*, Change*, Hold*, Euro*, 1/2lb*, 1/4lb*, kg/lb*
Communication	RS232/ USB
Accessories	<ul style="list-style-type: none"> <li>• NIMH rechargeable battery (6pcs)</li> <li>• Ticket roll</li> <li>• Plastic cover for pan</li> <li>• RS232 POS connector</li> <li>• Plastic cover for housing</li> <li>• USB POS connector</li> <li>• Deep plate</li> </ul>

\*Not available in all countries.

### Dimensions

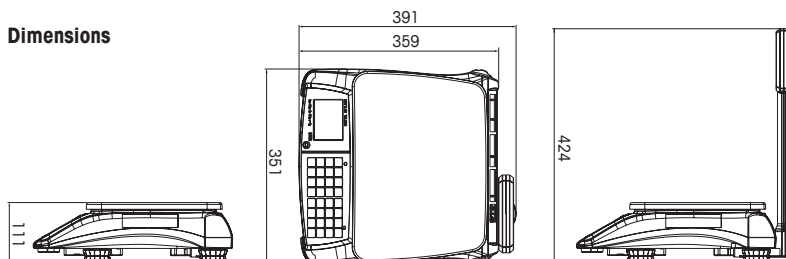

[www.mt.com](http://www.mt.com)

For more information



ISO 9001 Quality management certification  
 ISO 14001 Environmental management certification  
 Internet: <http://www.mt.com>  
 Worldwide service

Subject to technical changes.  
 © 09/2020 Mettler-Toledo AG  
 Global MarCom Switzerland

